



INSULATION HOLDER + WASHER


Mounting

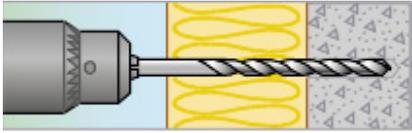

1. Drill a hole $\varnothing 10$ mm through the insulation into the wall material. Drill depth in concrete min. 40 mm.

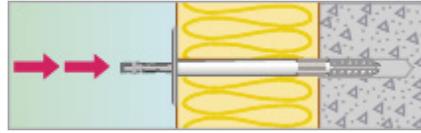

2. Push in the Insulation holder until the washer rests against the insulation. Now knock in the pin. For soft insulation, the extra washer is pushed onto the insulation holder before installation.

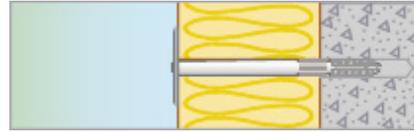

3. Installation is complete.